

NEW

YOKOGAWA 

Digital Earth Tester

EY200

- Capable to measure by 3-pole or 2-pole method
- Easy to measure with one touch button and dedicated test lead
- Small and lightweight
- Dust and drip proof (designed to IEC60529 IP54)



Standard Accessories below are provided with EY200 !



Earth Spikes



3-pole Test Lead



Soft Case



2-pole Test Lead Set

Yokogawa Meters & Instruments Corporation

LF EY200-EN

Specifications



• Model Code


Name	Model
Digital Earth Tester	EY200

• EY200 General Specifications

Display	LCD Digital Display: 1999-count digital reading
Measuring Range	Earth Resistance: 2000Ω LSD: 0.01 to 1Ω Earth Voltage: 200V
Accuracy	Earth Resistance: 20Ω range: ±2%rdg±0.1Ω 200Ω range: ±2%rdg±3dgt 2000Ω range: ±2%rdg±3dgt Earth Voltage: ±1%rdg±4dgt
Measuring Frequency	Approx. 820Hz
Measuring Current	Approx. 3mA (at 20Ω range)
Battery Life	Approx. 4.5hours (at 5 second measuring 3300 times)
Operating Temp. and Humidity	0~40°C, 85%Rh or less
Dimensions	Approx. 105×158×70mm
Weight	Approx. 550g
Standard Accessories	3-pole Test Lead (Model 98074), Earth Spikes (for EY200) (Model 98070), 2-pole Test Lead Set (Model 98075), Soft Case (Model 93041), Shoulder Belt (for EY200) (Model 99018), Six AA (R6) dry cells, User's manual


3-pole earth resistance measurement (precise measurement)

Connect the earth/ground electrode (E) and auxiliary spikes (P, C) to the main body using the accessory test lead. Put apart 5 to 10 m between E and P, and P and C, respectively. E, P, and C should be approximately in a line.

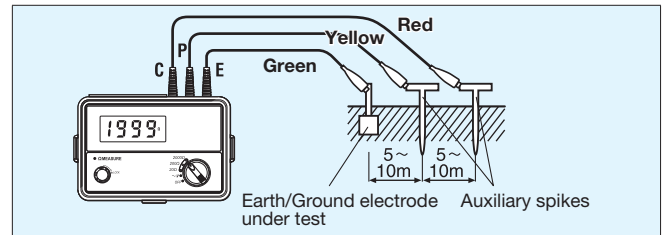

2-pole earth resistance measurement (simplified measurement)

A simplified 2-pole measuring method can be used if there is an almost perfectly earth/ground object such as a lead or iron water-pipe (plastic pipes cannot be used) or if there is an object with a known value of earth resistance, near the measurement site.

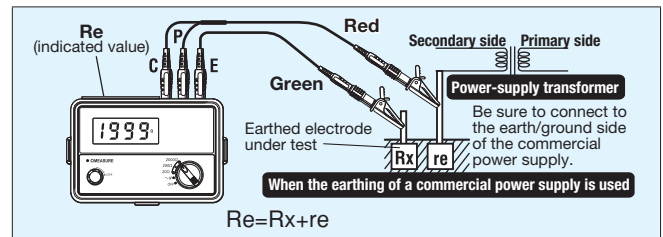


Other Earth Testers

Model 3235 Earth Tester




External Dimensions


Unit: mm

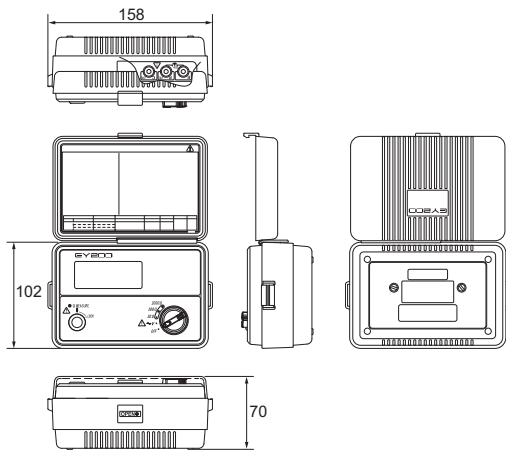


98074

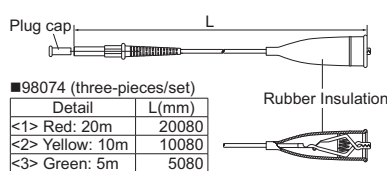

98070

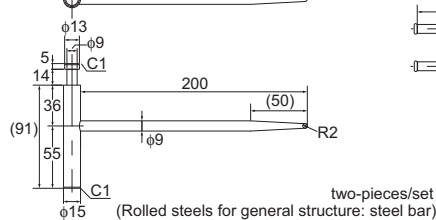

98075

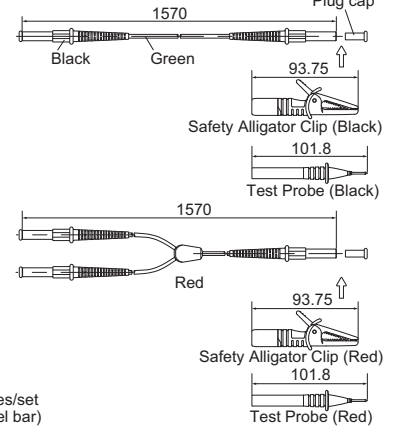

YOKOGAWA 
Yokogawa Meters & Instruments Corporation

World Wide Web site at
<http://www.yokogawa.com/yml>

NOTICE

- Before using the product, read the instruction manual carefully to ensure proper and safe operation.

YOKOGAWA METERS & INSTRUMENTS CORPORATION Tachihi Bld. No.2, 6-1-3 Sakaecho, Tachikawa-shi, Tokyo, 190-8586 Japan
International Sales Dept. Phone: +81-42-534-1413 Facsimile: +81-42-534-1426

YOKOGAWA CORPORATION OF AMERICA (U.S.A.)	Phone: +1-770-253-7000	Facsimile: +1-770-254-0928
YOKOGAWA EUROPE B. V. (THE NETHERLANDS)	Phone: +31-88-4641000	Facsimile: +31-88-4641111
YOKOGAWA ENGINEERING ASIA PTE. LTD. (SINGAPORE)	Phone: +65-6241-9933	Facsimile: +65-6241-2606
YOKOGAWA AMERICA DO SUL LTDA (BRAZIL)	Phone: +55-11-5681-2400	Facsimile: +55-11-5681-4434
YOKOGAWA MEASURING INSTRUMENTS KOREA CORPORATION (KOREA)	Phone: +82-2-551-0660	Facsimile: +82-2-551-0665
YOKOGAWA AUSTRALIA PTY. LTD. (AUSTRALIA)	Phone: +61-2-8870-1100	Facsimile: +61-2-8870-1111
YOKOGAWA INDIA LTD. (INDIA)	Phone: +91-80-4158-6000	Facsimile: +91-80-2852-1441
YOKOGAWA SHANGHAI TRADING CO., LTD. (CHINA)	Phone: +86-21-6239-6363	Facsimile: +86-21-6880-4987
YOKOGAWA MIDDLE EAST B. S. C. (C) (BAHRAIN)	Phone: +973-17-358100	Facsimile: +973-17-336100
YOKOGAWA ELECTRIC CIS LTD. (RUSSIAN FEDERATION)	Phone: +7-495-737-7868	Facsimile: +7-495-737-7869

Represented by:

MIK-ES17